


6-WAY ROUND PIN TESTER

Verify that the vehicle is wired to the universal standard (see chart on back). Plug tester into vehicle connection. The LEDs on the connector correspond with the vehicle circuit. Use this tester to verify continuity and configuration from the vehicle. If the LED does not light when the circuit is powered up, there is a faulty wiring issue between the connector and fuse box.

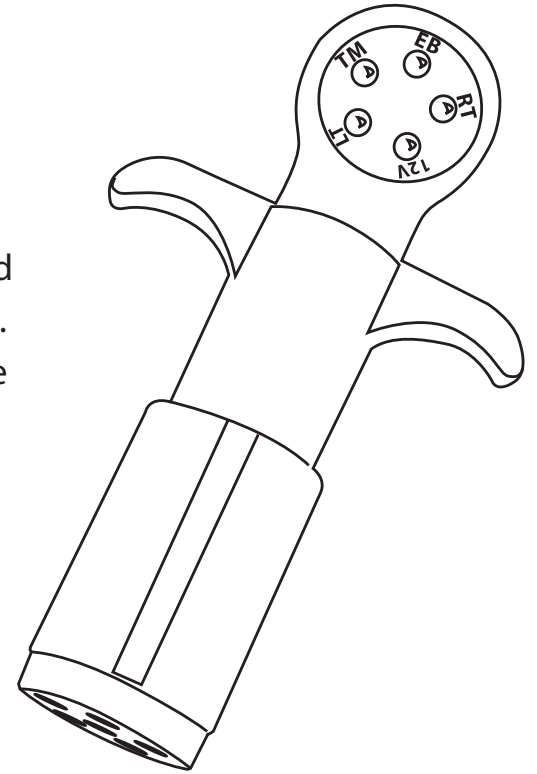

Note: Not all trailers/ vehicles are wired to this standard. The use of an electrical circuit tester is necessary to ensure proper match of vehicle's wiring to trailer's wiring. On the 6-way plugs the 12V wire and electric brake wire may be reversed to accommodate trailer (particularly horse trailers.)

6-WAY PLUG VEHICAL END	6-WAY PLUG TRAILER END
