


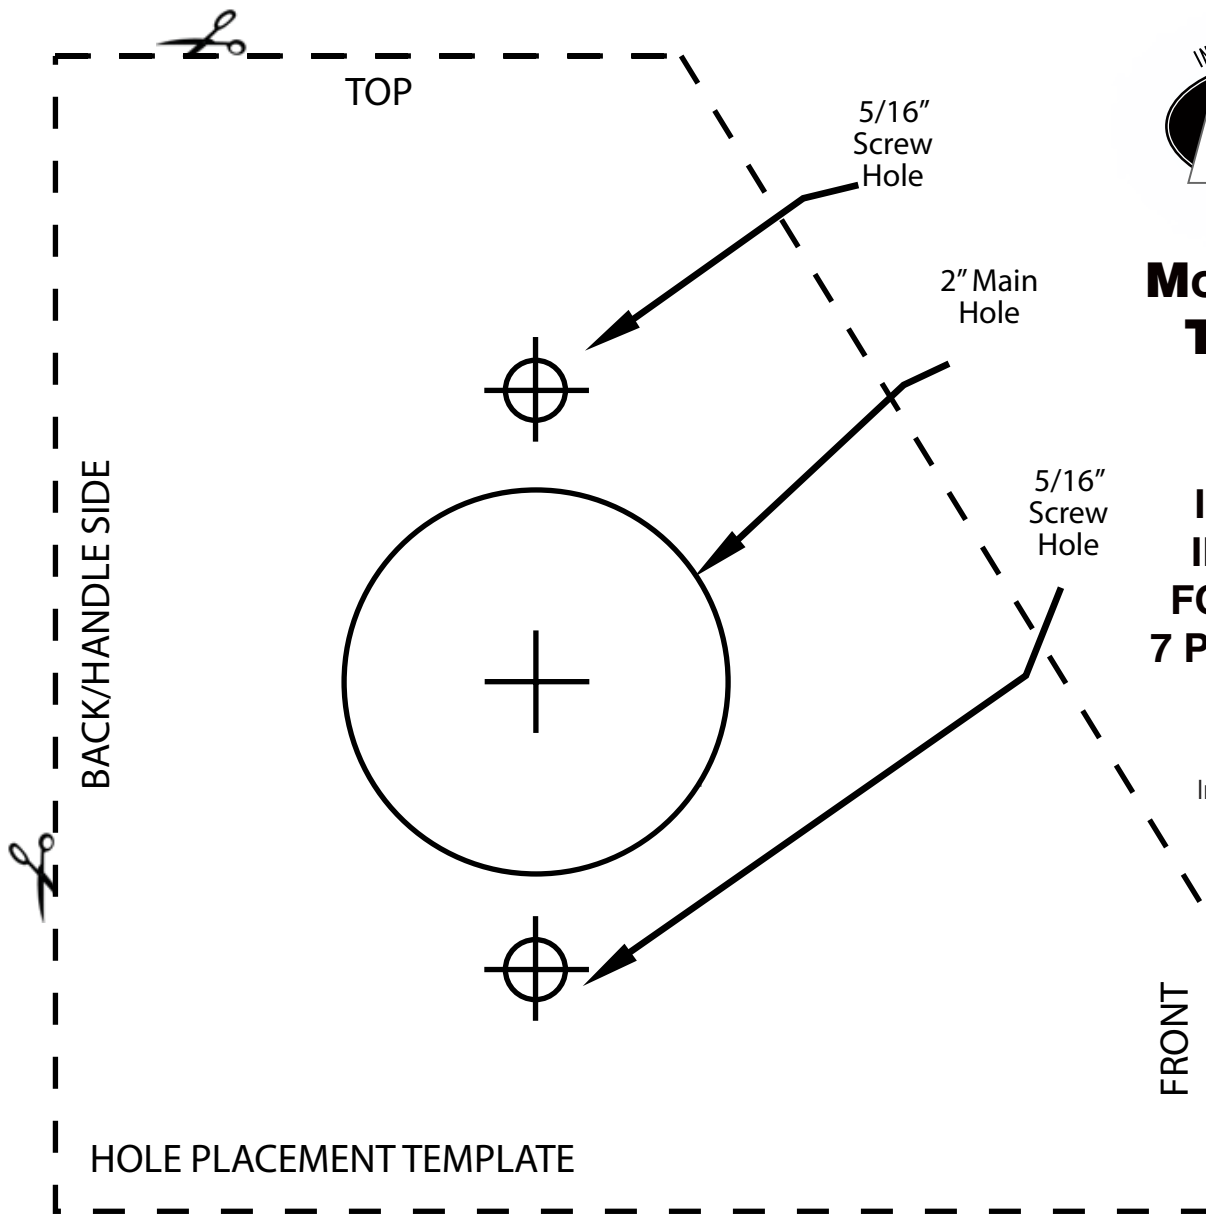

Mobile Universal Trailer Tester (MUTT) 7900APX INSTALLATION INSTRUCTIONS FOR ADDITIONAL 7 PIN RECEPTACLE

Innovative Products of America™
www.ipatools.com
 Warranty/Repair
 1674 Kirkwood Pike,
 Kirkwood, PA 17536
 717-529-4000

Corporate/Sales Office
 P.O. Box 266
 Mt. Tremper, NY 12457
 888.786.7899



INSTALLATION INSTRUCTIONS:

1. Remove the battery and any other loose item on the cart.
2. Unbolt the two battery clamps from the wires in the battery compartment. Remove the clamps and red rubber boot from the wires.
3. With a #2 Phillips head screwdriver, remove the 6 screws that hold the head to the unit and put them in a safe place.
4. Carefully, hold the mutt head at the top plug and from the bottom shelf area and slowly pull it off of the unit. Remove the wires from the back channel with care and set the head in a safe place.
5. Lay the cart on it's side on a soft surface to prevent scratching the powder coating.
6. With the supplied template, mark the center hole location on the left hand side of the mutt.
7. Carefully punch the centers of each hole on the unit.
8. With a step drill, carefully drill the 3 holes to the specified diameter. The 2 inch hole will only need a 3/4 inch pilot hole.
9. Unscrew the punch and insert the threaded portion through the 3/4 inch pilot hole. Screw the back on until it is snug with the metal.
10. With the appropriate wrench, tighten the punch until it completely bites through the metal. **Be careful once the punch is through, it may fall and damage the unit. Make sure the punch does not fall.**
11. Insert the socket in the side of the unit. With the supplied hardware, fasten it to the unit.
12. Stand the mutt upright. Carefully pick up the head and slide the wires for the battery down the back channel until they come out into the battery compartment.
13. Carefully place the head into position on the cart body. Replace the 6 mounting screws.
14. Pull down on the battery wires until you have enough to mount the battery. Replace the red boot on the ribbed wire. Replace the battery clamps so the + is on the ribbed wire.
15. Replace the battery. You are done!

Install On
Left Side

